



Lynx 30" Universal Cart

L30, L30AG, and LSMK

The following instructions are provided to help you install the Asado, 30" Grill, or Sonoma Smoker on the L30CART.

 
IMPORTANT: Be sure the L30CART's casters are locked to avoid movement when installing the grill.

Warning: The L30AG is approximately 208 lbs., the LSMK is approximately 135 lbs, and the L30 grill is approximately 241 lbs.


You will require assistance to lift and install any of these items onto the cart.

Tools required: Rags, newspaper (to place any items on), philips head screwdriver, and gloves.


This cart is intended for use with the Lynx 30" Professional Grill, 30" Asado Grill, and the 30" Sonoma Smoker only.

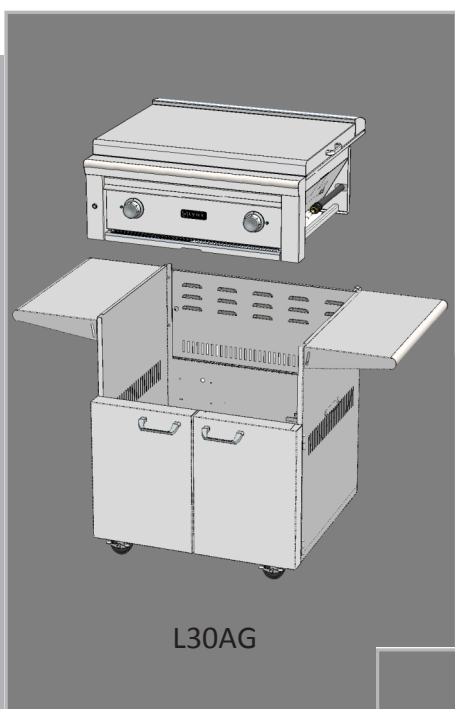

L30AG

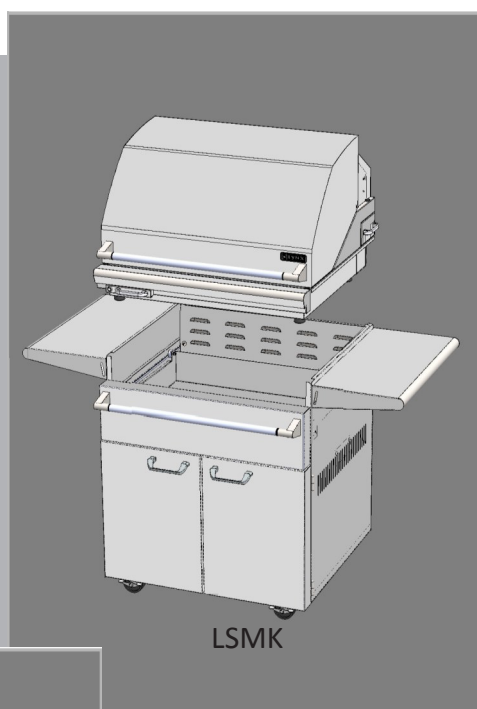 



LSMK

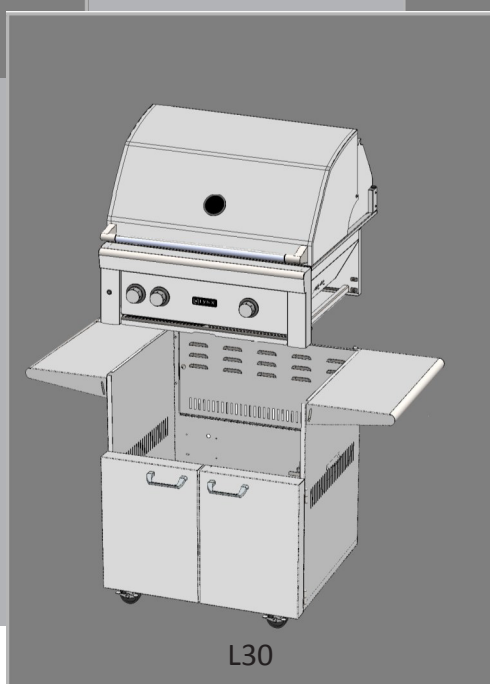 


L30

L30AG

  
1. Remove the four screws on the back panel.
2. Slide out the drawer and remove completely.
3. Next remove the screws which attach the rails and remove the rails to begin installation.

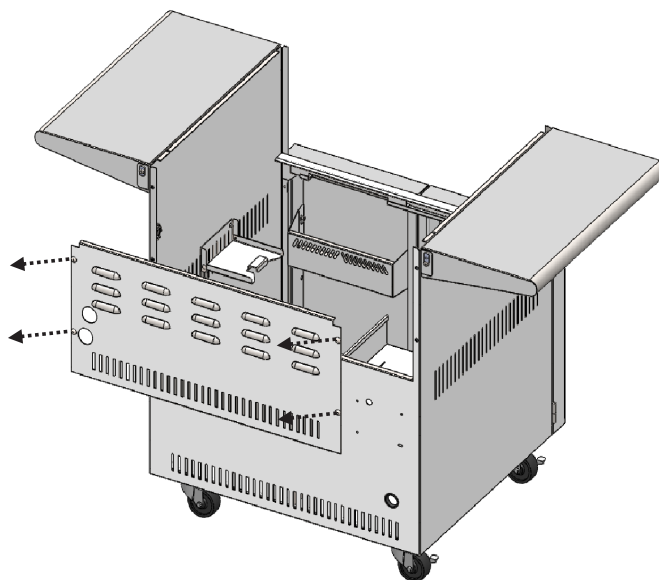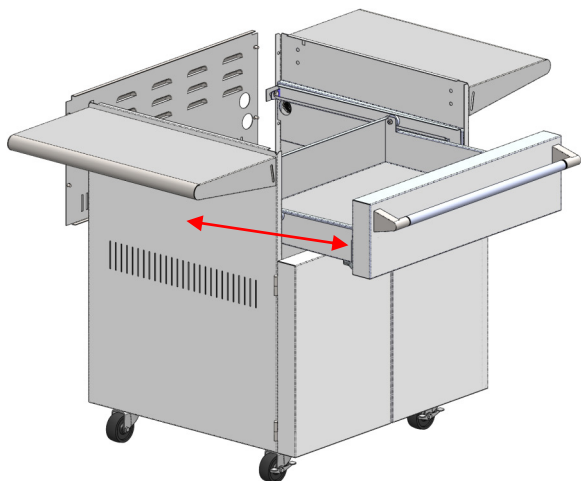

 
4. Carefully lift the Asado Grill and position it above the cart.

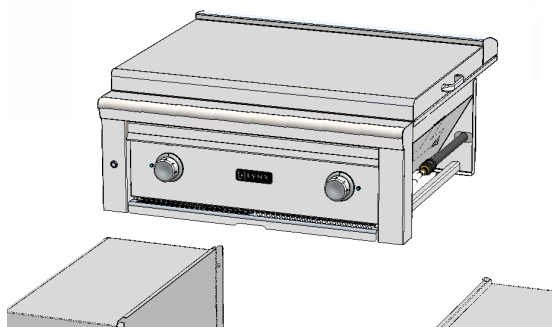

 5. Place the Asado Grill inside the cart frame.


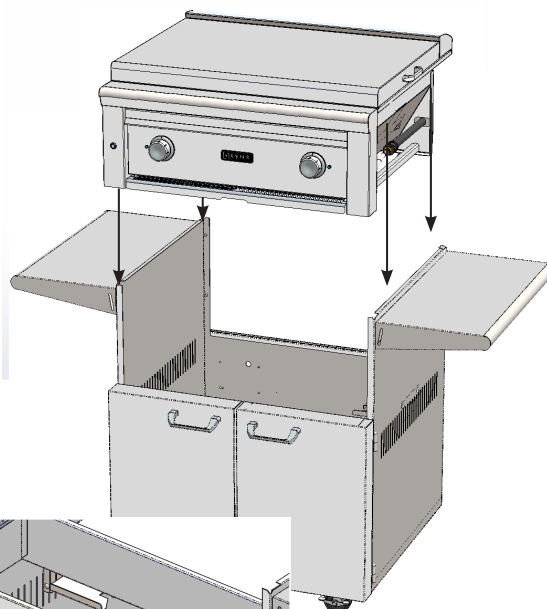


 6. Re-attach the rear panel with the previously removed screws.

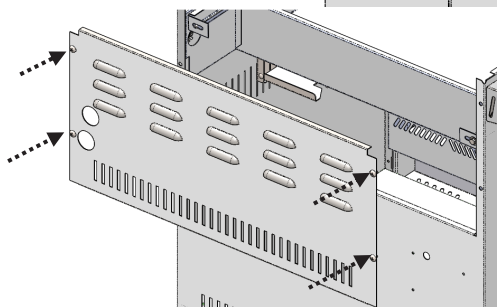


L30 Grill

  
1. Remove the four screws on the back panel.
2. Slide out the drawer and remove completely.
3. Next remove the screws which attach the rails and remove the rails to begin installation.

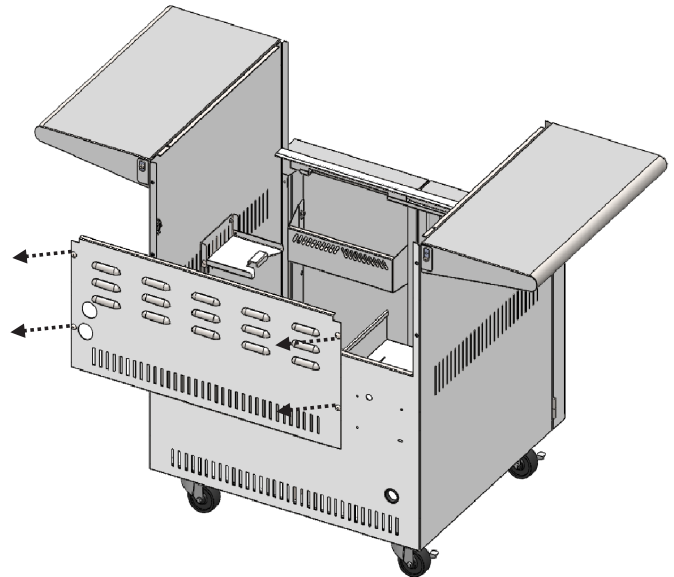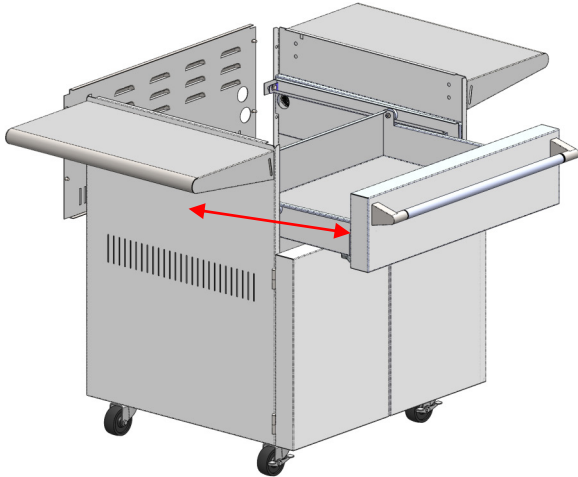


 
4. Carefully lift the 30" Grill and position it above the cart.

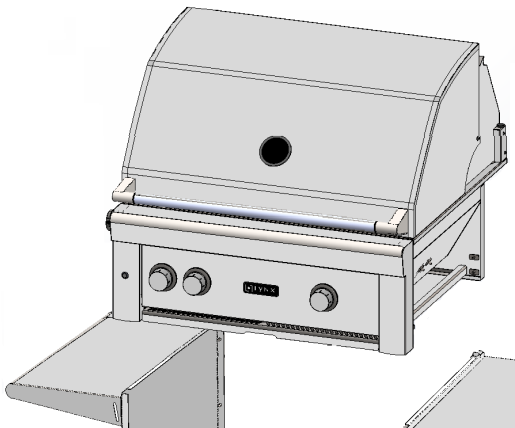

 5. Place the 30" Grill inside the cart frame.

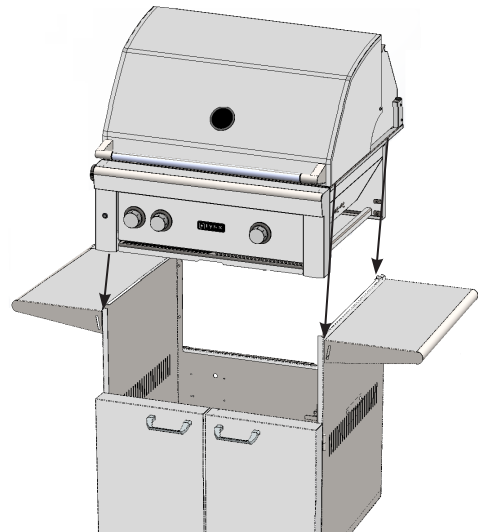

 
 
6. Re-attach the rear panel with the previously removed screws.

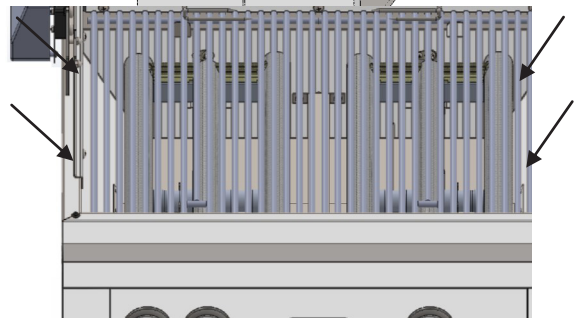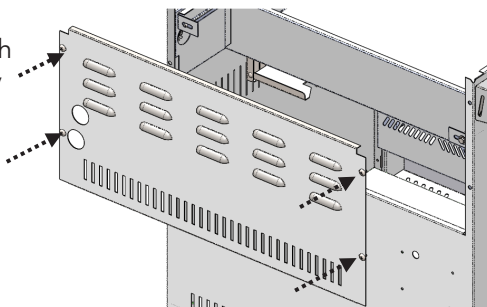


Once the grill has been placed inside the cart. You will remove the following screws and replace them with the supplied screws.

LSMK

  
1. Remove the four screws on the back panel.
2. Slide out the drawer or remove completely to install.

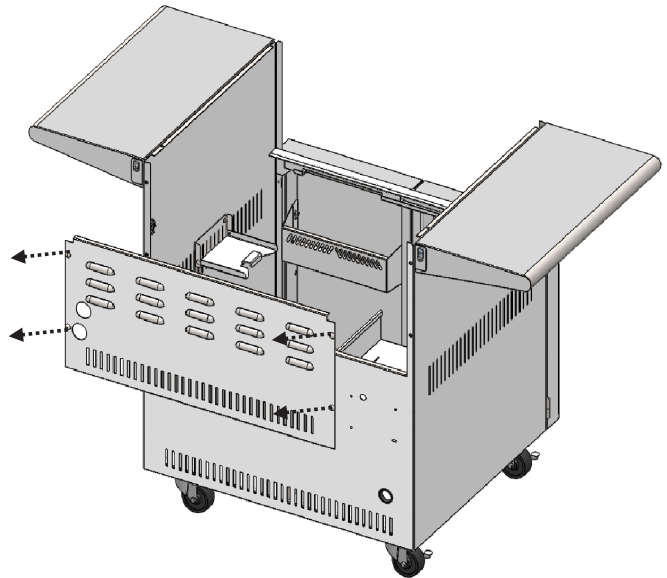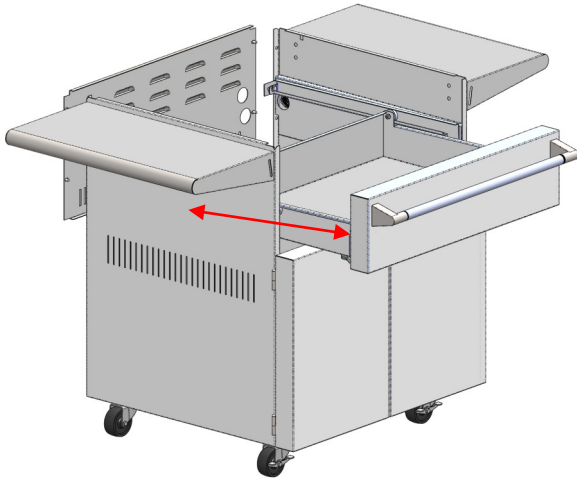


 
3. Carefully lift the Sonoma Smoker and position it above the cart.

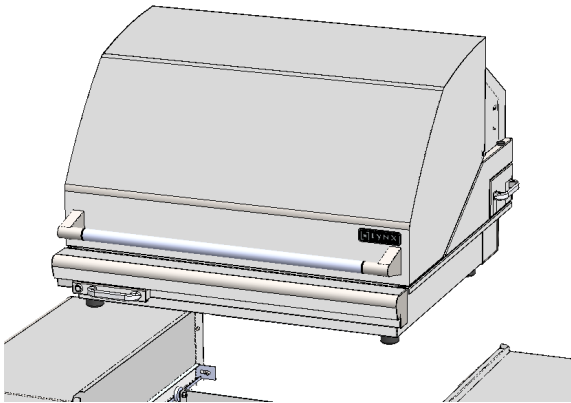

 4. Place the smoker inside the cart frame. Once the smoker is in the cart you can reinstall the drawer.

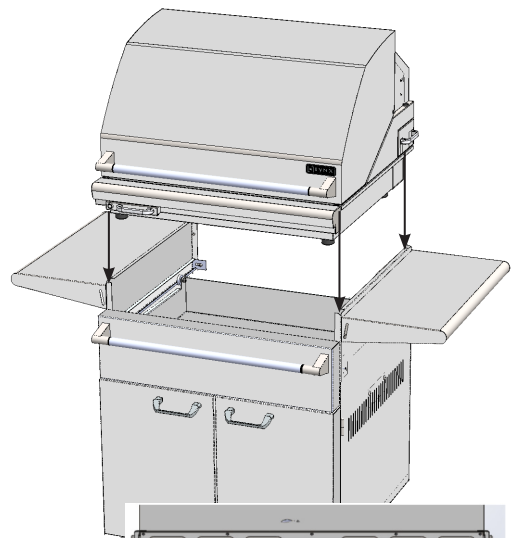

  6. Re-attach the rear panel with the previously removed screws.

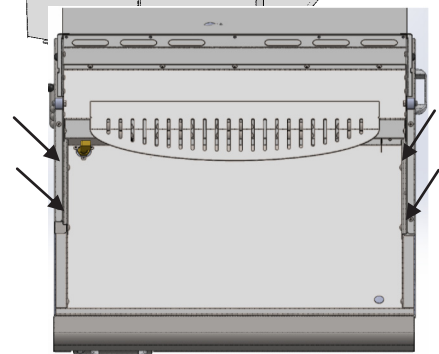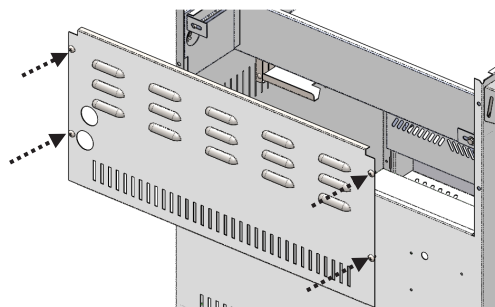

Once the smoker has been placed inside the cart. You will remove the following screws and replace them with the supplied screws.



Lynx Grills, Inc.
62201 Hwy 82 West
Greenwood, MS 38930
Service: (888)-289-5969 Fax: (562) 299-6978
www.lynxgrills.com