

# SEDONA BY LYNX™ INSULATED JACKET INSTALLATION INSTRUCTIONS


**IMPORTANT:** Before you build the frame, you must take into consideration the total weight of the liner, grill and any finishing materials. The frame (cabinet cutout) requires a full solid base to support the insulated jacket.

Refer to the table below for the proper framing dimensions for the insulation jacket. Determine the entry point for both the gas inlet and electrical connections. Make the 4” square holes for gas and electrical connections (rear or bottom access) based on your requirements. Note that the electrical connections are located on the left side and the gas connections are located on the right side.

A Carpenter’s “spirit level” should be used to assure that the framing is level, both front to back and side to side.

Note: Never under any circumstance should you install the transformer or run a quick disconnect hose in-between the grill and the inside of the insulating jacket.

| Model  | A  | B   | C    | D   | E | F      |
|--------|----|-----|------|-----|---|--------|
| LIJ400 | 30 | 2 ¼ | 23 ¼ | 3 ½ | 2 | 11 5/8 |
| LIJ500 | 36 | 2 ¼ | 23 ¼ | 3 ½ | 2 | 11 5/8 |
| LIJ600 | 42 | 2 ¼ | 23 ¼ | 3 ½ | 2 | 11 5/8 |
| LIJ700 | 48 | 2 ¼ | 23 ¼ | 3 ½ | 2 | 11 5/8 |

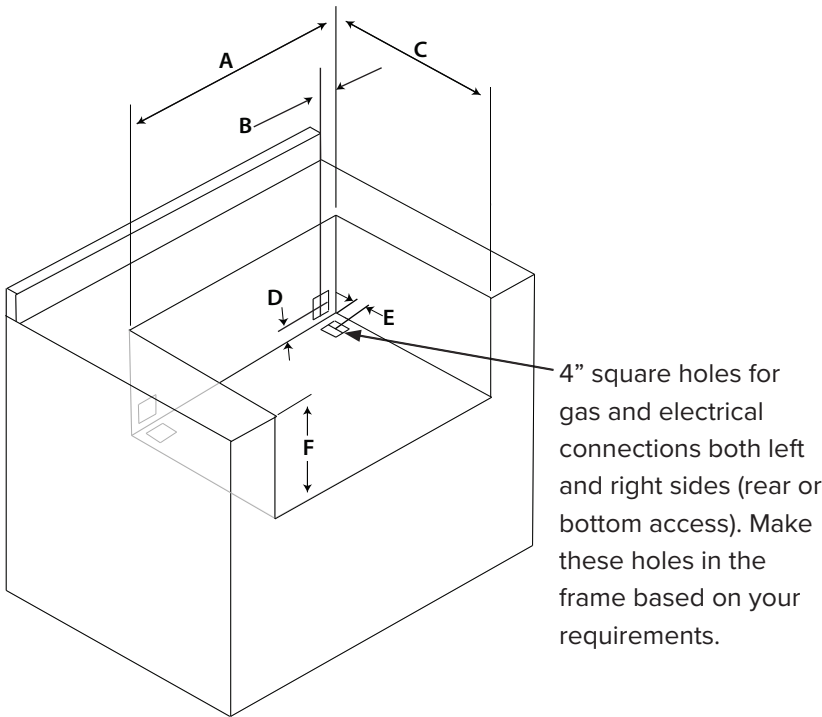

## LINER INSTALLATION


Position the liner into the frame. No part of the combustible enclosure can protrude above the top surface or in front of the face surface of the liner. Shim the liner if necessary.

## GRILL INSTALLATION

Use the proper equipment to support the grill. Place the grill into the liner and engage it over the liner lip across the back and sides. The liner is designed to support the grill without additional fasteners.

## FINISHING

If desired any gap remaining between the liner and the combustible enclosure may be filled with a non-combustible sealant or caulk.

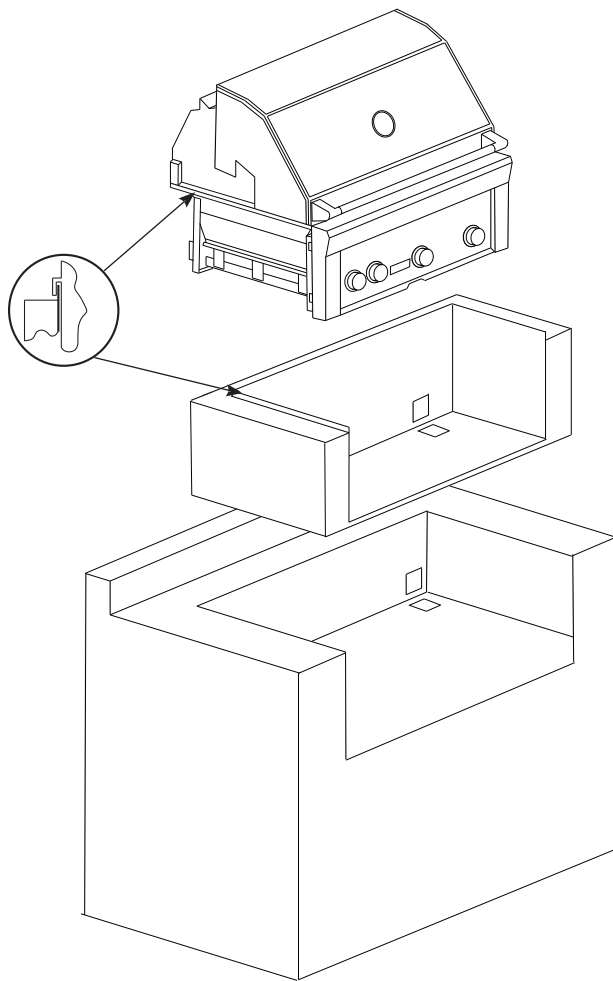

After installing grill to the insulated jacket, replace the 3 screws on both sides of the grill with the included 1" screws, one screw at a time. This is to straighten out the sides of the insulated jacket and reduce the gap to the cabinet.

